



### Removal

---

- 1 Remove clipped-in cover (a screwdriver ground flat can be used as a tool).

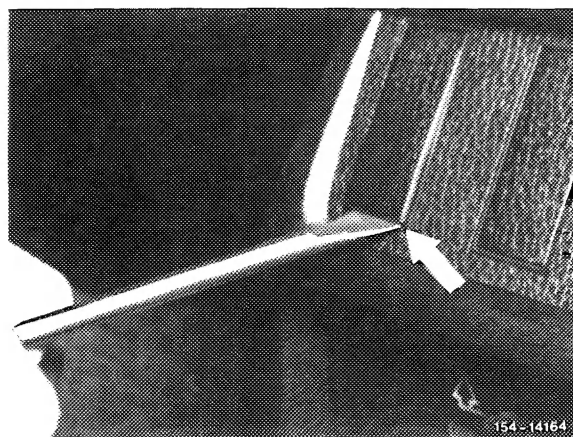

- 2 Remove switch of heatable rear window.

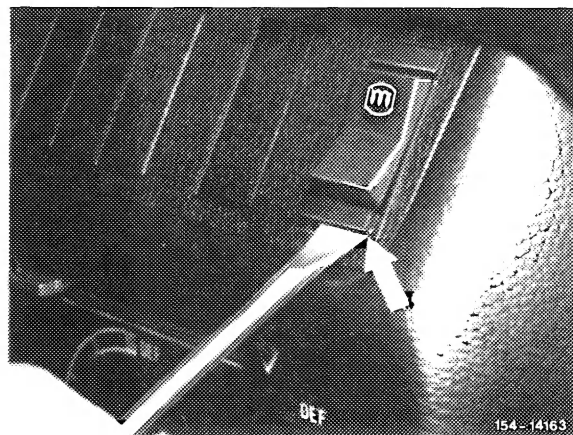

- 3 On 1st version the console is screwed on (arrows, Fig.), on 2nd version it is clipped in. Remove console canted in downward direction.

### Installation

---

- 4 For installation proceed vice versa.

